




RELAY BOX DK-GPHF-4R

Find **EXT** Connector (pin header) on Indicator's PCB

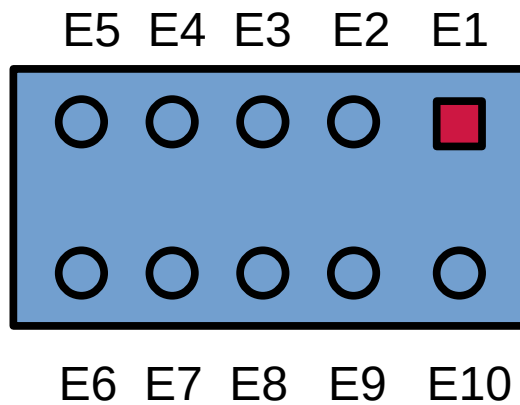

(In the case model NSGP & NSHF letter E=J)

Pin header on D'k-H indicators pcb: NSGP-CL, NSHF-CL, NSGP+

Ext pin	E1	E2	E3	E4	E5	Any Pin 6-10
DB 25 FEMALE	Any PIN 8-13	1	3	PIN 5	PIN 7	Any PIN 14-25

Pin header on D'k-H indicators pcb: NSGP, NSHF, (LED display)

Find J1 connector on PCB (close to software Eprom)
Same as above EXT

J1 Pin	J1-2	Any Pin 3-6	J7 N/C	J8	J9	J10
DB 25 FEMALE	Any PIN 8-13 5 VDC	Any Pin 14-25 GND	N/C	PIN 3 (OK)	PIN 5 ALTA	PIN1 BAJA